

# Pleated Blinds - Child Safety

## Cord Cleat

### For the installer

Cord cleat should be fixed by two screws in a safe position, not accessible to children. **Always attach a Safety Warning Tag**



### For the consumer

Always wrap the cord or chains around the cleat after use.

## Cord Safety Tassel

### For the installer

With the tassel split, feed one cord through the hole in one section and tie a knot. Repeat with the second section. Ensure all cords are the same length and snap fix the tassel together.

Any extra cords should be individually knotted and placed into the central hole that is formed when the acorn is snapped together. **Always attach a Safety Warning Tag**

### For the consumer

If any reasonable weight is placed within the cords, the tassel will break apart. To re connect, check tassel is not damaged, then place the two halves of the tassel together and press shut until fixed.



## Cord Connector Ball


### For the installer

Used to fix to cords to stop them being pulled back through the cord lock and prevents these cords looping.

Introduce cord connector ball onto the operating cords before adding the final acorn. With blind fully deployed make a mark 25mm under the cord lock. With one half of the cord connecting ball above the mark and the other below the mark tie a knot at the mark. Screw two halves of the connector together encapsulating the knot (make sure the knot is big enough so that it does not slip through the hole in the ball connector.) **Always attach a Safety Warning Tag**

### For the consumer

Should the ball become separated into two halves simply screw them back together over the knot which will be visible near the top of the cord when the blind is fully deployed.

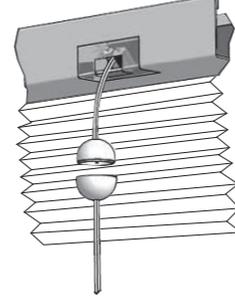

Part Code No. 9780


## WARNING

Young children can strangle in the loop of pull cords, chains and tapes, and cords that operate window coverings. They can also wrap cords around their necks. To avoid strangulation and entanglement, keep cords out of the reach of young children. Move beds, cots and furniture away from window covering cords.



"Complete elimination of the strangulation risk can only be achieved by keeping cords, chains, and tapes and similar out of the reach of children. Use of additional safety devices may reduce the risk of strangulation but cannot be considered foolproof ... Persons in charge of children are ultimately responsible for following the safety instructions provided by the manufacturer." EN 13120

# LOUVOLITE

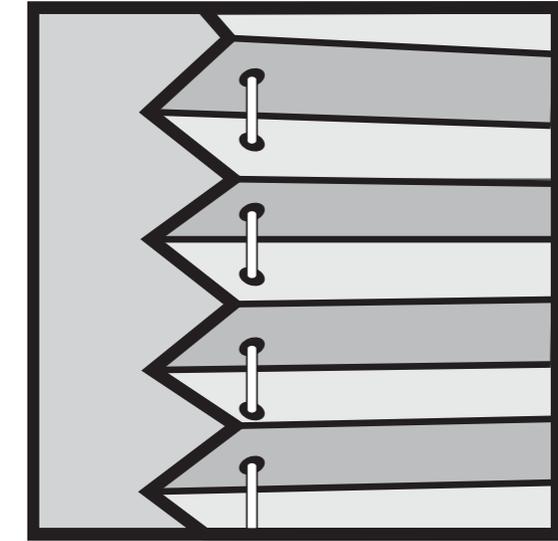

## Pleated Blind 20mm

Fitting and Operating Instructions

Before attempting to fit your window blind, please read the instructions carefully.

The installation pack will include sufficient brackets and screws for the fitting of your blinds.


### IMPORTANT

Please read the child safety information attached to your blind.

## Free Hang Blinds (Rectangular)


### Top Fixing Brackets

Fix two brackets to the ceiling or lintel, using holes drilled at least 25mm (1") from the wall or window frame and at least 70mm (2 ¾") from each end of the blind. Any remaining brackets should be fixed equidistantly between these first two brackets.

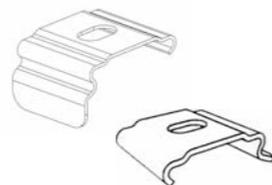


### Face or Side Fixing Brackets

Face fix the brackets to the wall or window frame as closely as possible to the ceiling or lintel with the same spacing as recommended for top fixing brackets.

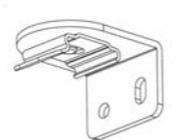

or

Side fix one bracket to the wall either side of the blind. Any remaining top fix brackets should be fixed so that the operation levers are spaced evenly between the end brackets.

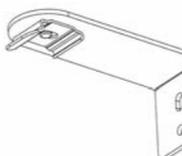

### Fitting the Headrail

The blind must be fitted with the control cords at the front. Release any cords wrapped around the rails. Angle the headrail so the groove is at the back slots into the back of the bracket. Push fit the rail into the front of the bracket. Ensure that the internal track cords are clear of the brackets.

### Operating your Free Hang Blinds

To lower the blind hold the control cord in a vertical position and pull it downwards slightly to release the cord locking mechanism. Keeping hold of the cord allow the blind to drop or unfurl slowly to the desired position. Pull the cord to the front of the blind to lock the mechanism.

## Skylight Blinds (Rectangular)

N.B.The blind will be held together with elastic bands. These must not be moved until you have read these instructions.

### Fitting the Brackets

Fit the brackets to the top and bottom of the window opening following the instructions for the free hang blinds. Brackets should be fixed level with the positions from which the blind measurements were taken.


### Fitting the Rail

Without removing the elastic bands fix the top rail to the brackets at the top of the window. Support the lower rail and remove the two outside elastic bands. Turn this lower rail so that the cords wrapped around it unwind. Maintain sufficient tension to ensure that the cords do not slip off the end of the rail and become entangled. When the cords are fully unwrapped remove any packing material from the lower rail, fit it to the locating brackets and remove the centre elastic band.

The friction cords, which are at the outside of the blind, are connected by an internal spring. They have been adjusted to the correct length during manufacture. Fitting the lower rail into the brackets stretches this spring and firm pressure must be used to locate the rail into the brackets. If, for any reason, the friction cords are too loose or too tight they can be adjusted easily. Release the rail at the bottom of the opening and undo the knot which joins one of the cords to the spring. Re-tie the knot in the position which allows the middle rail to move up and down easily and remain in any position to which it is set when the bottom rail is replaced in its brackets.

### Tensioning the Nylon Fabric Supports


The ends of the Nylon Fabric Supports project from the bottom rail of the blind. Each one is fitted with a barrel clamp. After the blind has been fitted into the brackets tighten each Nylon Support by undoing the screw on the clamp and pulling the nylon until it is taut. Re-tighten the clamp screw taking care not to cut the nylon by over-tightening the screws. Push the clamp into the hole in the rail and continue until all the Nylon Supports have been tightened.

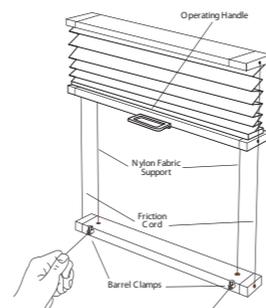

## Skylight Blinds (Triangular)


### Fitting the Brackets

Assemble the apex bracket as illustrated. To fit a blind inside a frame, mount the apex bracket as near as possible to the apex of the frame with the centre plate parallel to the base of the opening. Fix the remaining brackets to the base of the opening. One bracket should be fitted approximately 6" (150mm) from each corner and any remaining brackets fitted equidistantly between these two. To fit a blind outside of an opening the brackets must be fitted at the same levels, but at the appropriate distance from the frame.

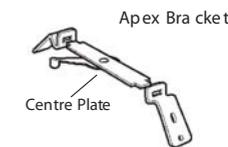

### Fitting the Blind

The blind consists of one wide rail to be fixed at the base of the opening; one short rail to be fixed at the top of the opening and a second short rail, which slides between the two fixed rails, drawing the fabric across the opening. The two fixed rails are connected by two friction cords, spaced approximately 3 ¼" (85mm) apart. They are also connected by a nylon guide which is in between the two friction cords. These friction cords will have been set to length during manufacture. However, they may require some adjustment during installation.

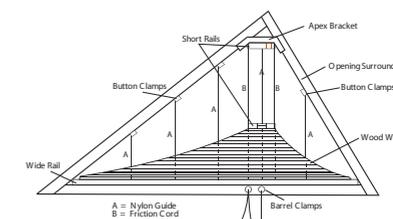

Unwind the cords from the wide rail of the blind. Fix this rail to the brackets at the base of the opening. Fix the Short Rail which is **not** attached to the fabric to the apex bracket. There may be some difficulty experienced in attaching this short rail to the bracket if the friction cords are too short. At the wide, bottom rail there are two clamps (see illustration). One holds two cords and one holds one nylon support. Loosen the clamp which holds the **two** cords. Ensure that the short top rail is fitted into the apex bracket and adjust the tension in the two cords, so that the short middle rail moves up and down easily and remains in any position to which it is set.

Tighten the nylon guide which runs between the two tension cords following the instructions for rectangular blinds. Now tighten the remaining nylon guide cords. These are held in place by plastic button clamps which should be fitted to the window frame at the top so that they are in a straight vertical line from the lower rail, then tighten the clamps.

### Operating your Skylight Blind.

Use the operating wand, which should have been stipulated for the blinds smooth operation to adjust to the desired level for comfort.