



## 20mm Free Hang Pleated Cording Instruction P4307 Wh/Br

These instructions refer to lift cord and pull cord. Lift cord is the fine cord, which passes through the fabric. Pull cord is the heavier cord connecting the lift cords to the lower rail.

NOTE : the headrail is 25mm shorter than the fabric

Cut, punch or drill the headrail and fabric. Please note that the first punch hole in the headrail nearest to the cord lock is only 25mm in from the end. This can be easily punched by using the P4070 punch tool with the pre-determined locators.

Put the headrail into the front recess of the fabric bar holders with the cord lock facing into the table. Slide the fabric into the headrail with the patterned side of the fabric also facing into the table.

Thread the lift cords downwards through the holes in the fabric and through the corresponding holes in the headrail. Thread the upper end of each cord through a bridge piece grommet so that the raised stub on each grommet is towards the fabric. Tie a washer to the end of each cord and push the stubs into the hole in the fabric. Pull the ends of the cords through the blind until the bridge piece grommets are held against the fabric.

Feed the pull cord through the grommet in the lower rail and tie the end of the cord, which is on the inside of the rail to a washer. Feed the lower rail over the bridge piece grommets with the grommet hole in the rail on the right for blinds with the controls on the right and the left for blinds with the controls on the left. Lift the whole assembly, turn it over and place it in the next recess in the fabric bar holders so that the headrail is in the uppermost position.

Feed the lift cords over the brass rollers along the inside of the headrail. Holding the cord lock with the jaws facing downwards, feed the cords between the brass roller and over the plastic roller. Feed the cords downward through the jaws of the cord lock and pull the remaining cord through the cord lock. Pull a short length of lift cord back into the headrail and take a brass roller and place it over the thin roller boss. **Then push the silver pin over the cords into the groove, which is located to the side of this.** Place the cordlock together and locate into position and fix with the screw provided. Lift the headrail onto the bench and check that the chords are correctly positioned.

Hang the blind fully extended to its full drop and pull the lift cord lightly to ensure that no loose cords remain inside the headrail. Feed the lift cords through one half of the connector ball and tie the ends to a washer. Thread the free end of the pull cord through the other half of the ball connector and tie with a washer. Screw the connector together.



## 20mm Free Hang Pleated Cording Instruction P4307 Wh/Br

These instructions refer to lift cord and pull cord. Lift cord is the fine cord, which passes through the fabric. Pull cord is the heavier cord connecting the lift cords to the lower rail.

NOTE : the headrail is 25mm shorter than the fabric

Cut, punch or drill the headrail and fabric. Please note that the first punch hole in the headrail nearest to the cord lock is only 25mm in from the end. This can be easily punched by using the P4070 punch tool with the pre-determined locators.

Put the headrail into the front recess of the fabric bar holders with the cord lock facing into the table. Slide the fabric into the headrail with the patterned side of the fabric also facing into the table.

Thread the lift cords downwards through the holes in the fabric and through the corresponding holes in the headrail. Thread the upper end of each cord through a bridge piece grommet so that the raised stub on each grommet is towards the fabric. Tie a washer to the end of each cord and push the stubs into the hole in the fabric. Pull the ends of the cords through the blind until the bridge piece grommets are held against the fabric.

Feed the pull cord through the grommet in the lower rail and tie the end of the cord, which is on the inside of the rail to a washer. Feed the lower rail over the bridge piece grommets with the grommet hole in the rail on the right for blinds with the controls on the right and the left for blinds with the controls on the left. Lift the whole assembly, turn it over and place it in the next recess in the fabric bar holders so that the headrail is in the uppermost position.

Feed the lift cords over the brass rollers along the inside of the headrail. Holding the cord lock with the jaws facing downwards, feed the cords between the brass roller and over the plastic roller. Feed the cords downward through the jaws of the cord lock and pull the remaining cord through the cord lock. Pull a short length of lift cord back into the headrail and take a brass roller and place it over the thin roller boss. **Then push the silver pin over the cords into the groove, which is located to the side of this.** Place the cordlock together and locate into position and fix with the screw provided. Lift the headrail onto the bench and check that the chords are correctly positioned.

Hang the blind fully extended to its full drop and pull the lift cord lightly to ensure that no loose cords remain inside the headrail. Feed the lift cords through one half of the connector ball and tie the ends to a washer. Thread the free end of the pull cord through the other half of the ball connector and tie with a washer. Screw the connector together.